




RotFix®

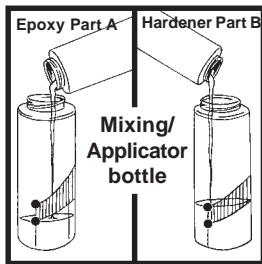

Mix two parts of RotFix® Epoxy (Part A) with one part of RotFix® Hardener (Part B) by volume. Mix no more than can be applied within 15 minutes. For easy measurement, use mixing/applicator squeeze bottle

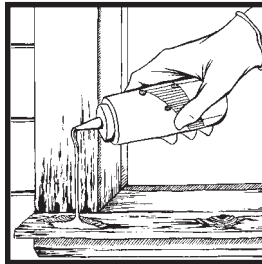


Apply to affected area with mixing/applicator squeeze bottle, syringe, brush or roller. The wood must be very dry (15% moisture content or less). Repeat if necessary.

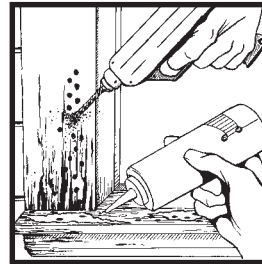


In extreme cases of deep rot, drill a series of holes into the decayed matter and pour liberally into the affected area. Allow ample time for RotFix® to soak well into the area. Repeat if necessary.


SculpWood®

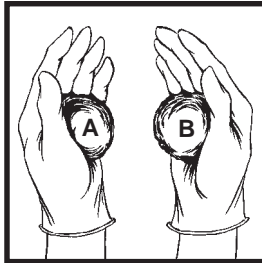

With disposable gloves on both hands, knead together one part of SculpWood® Epoxy (Part A) with one part SculpWood® Hardener (Part B) by volume. Mix no more than can be applied within 15 Minutes.

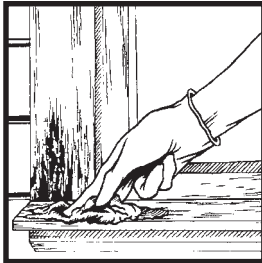

Apply over wood that has been treated and sealed with RotFix®. SculpWood® can be applied over cured or uncured RotFix®. Mold to a rough finished shape.

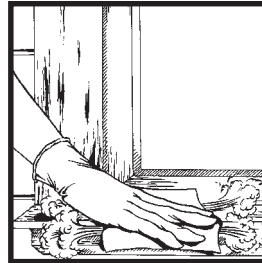

When cured, SculpWood® can be sawed, nailed, carved, machined and sanded. Sculpwood® can also be painted.